



**9 Bay M.2 (NVMe,PCIe) +1xUSB-A 3.2 10G To
USB-C 3.2 Gen2 10Gbps (Non-RAID)**

PRODUCT INSTRUCTION

Model: 803M09



【Quality Assurance】 Cenmate provides lifetime technical support. Please don't hesitate to contact us if you have any questions about the product, we reply and solve your problem within 24 hours.

Technical Support Contact:
cenmate23@outlook.com

【Low Heat】 The hard drive enclosure with Aluminum-Alloy materials and built-in 2.7 inch Fans provide better heat dissipation, maximize the security of your data. Fan noise is around 40-60 decibels, not recommended if you are sensitive to noise.

Qusetion

Q1: After connecting new hard drive to the computer, why can't I find the hard drive and display the disc letter?

A1: After the new hard drive is connected to the computer, it must be formatted before the system can be recognised and used.

Method of operation: First, right-click 'Computer', then click 'Management', open into the 'Disk Management', find the new hard drive, right-click 'Initialisation' 'Select 'MBR (hard drive capacity less than or equal to 2TB)' or 'GPT (more than 2TB)', then 'New Simple Volume', the default next step to format the partition. Formatting is completed after the hard drive can be used normally, showing the new disc symbols.

Q2: The hard drive appears in RAW format in Disk Management due to improper extraction or power failure. What should I do?

A2: Recovery through the chkdsk command; operation method: administrator identity run cmd input CHKDSK i: /f enter (here the i is the disk letter of the disk), scanning and repair is complete reboot can be displayed.

Q3: The hard drive is dynamically invalid in Disk Management since it was previously removed from an old computer?

A3: This is due to your system. Reinstall the hard drive into the original computer motherboard, and then backed up the data format; If your old computer has been scrapped or can't get into the system, you can download a dynamic drive conversion software to convert directly to a basic drive.

Q4: Hard drive just shows up but no disc letter?

A4: Inside Disk Management, right-click on the Disk Partition section and select Change Disk Path and Name to add a disk name for use.

Q5: It automatically disconnects during transmission and then connects itself after a while?

A5: It may be problems of usb interface on computer, usb cable, computer usb driver, hard drive, or hard drive cabinet. You need to contact our technicians to check the problems one by one.

Product Specifications

SSD Supported	M.2 SSD Supported Supports 2230/42/60/80/110 NVMe SSD
Cooling Fan	2.7 Inch Cooling Fan
Interface	USB 3.2
Max. Transfer Rate	10Gbps
OS Support	Windows 2000 or above, MAC OS 10.3 or above, and Linux
Power Adapter	12V Power Adapter
Enclosure	Extruded Aluminum Case
Dimension	205x130x112mm
Note	HDD/SSD is not included

 
CONTENT

1. 9*M.2 NVMe Enclosure
2. Mounting screws and screw driver
3. USB 3.2 A/C Cable
4. 12V Power Supply
5. User Manual

How to use

- 1.Pull out the tray
- 2.Install the M.2 SSD
- 3.Connect USB to the computer
- 4.Plug in the power supply, turn on the power switch
- 5.The fan rotates and the hard drive light is on indicating that it is normal and you can start using it.


Feature

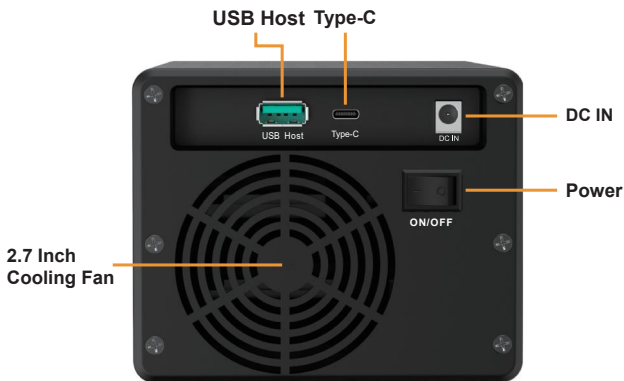

1. ON/OFF : Power
2. DC IN : 12V Power Supply
3. Type-C : USB 3.2 (MAX 10Gbps)
4. USB Host : The USB Host port is USB-A 3.2
(which can be connected to a mouse, keyboard,
USB flash drive, card reader and other devices)
5. Cooling Fan : 2.7 Inch Fan

Steps for Installing a Hard Drive

 Bracket Removing

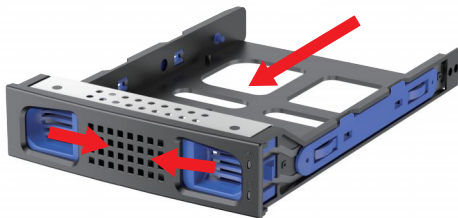

Squeeze the blue spring clip to wards the centre and pull the bracket outwards.

 
M.2 SSD Installation

①




Insert M.2 SSD into slot until they cocked.

②

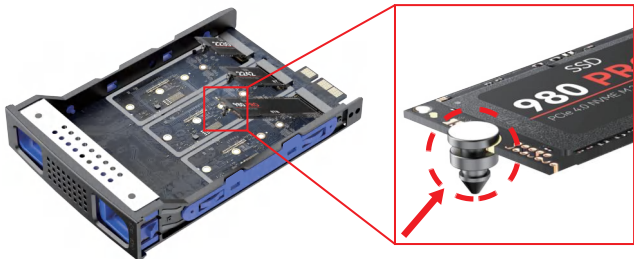

Snap the rubber plug into the metal half-circle of the M.2 SSD.

 ③

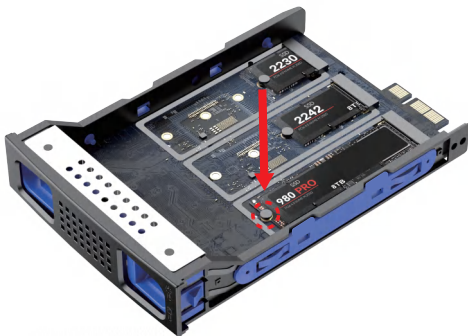

Press the rubber plug with the M.2 SSD down into the bayonet until it's secure.

Lighting Display Instructions



M.2 NVMe light prompts

M.2-1 and M.2-2 share this light, when connected red +blue, will show purple light.

① The blue light is the M.2-1 light, it will always on when connected, flashes when read/write.

③
⑤ The red light is the M.2-2 light, it will always on when connected, flashes when read/write.

② The red light is for M.2-3 light, it will always on when connected, flashes when read/write.

④
⑥

Partition and Format

Note: Formatting is only required for new drives



 
NOTE:

Please follow below information on how to partition and format the drives before use




NOTE:


Data will be lost when you reset the unit.

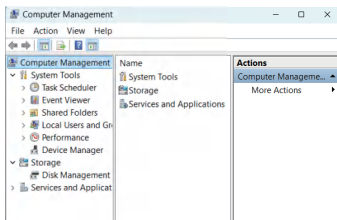

Right click on “My Computer” icon and select “Manager”. When this window appears, select “Disk Management”.

  Right click on the disk on “New Volume” and select “Initialize Disk”.

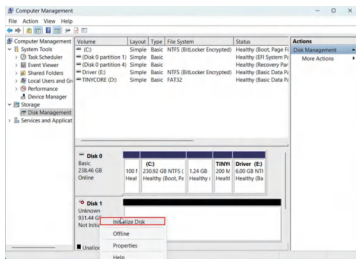

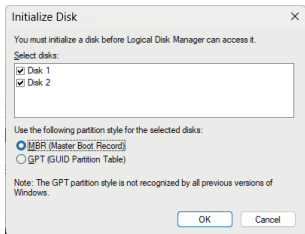


Select the new drive to start with the configuration.

Select:

MBR (hard drive capacity less than or equal to 2TB)


GPT (bigger than 2TB)

 When new drive appears, right click on it and select “New Simple Volume”

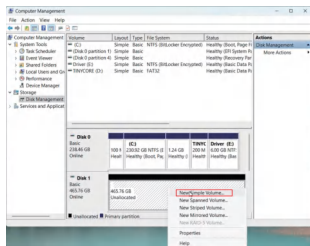

When the wizard window appears, click on [Next].

 Select the partition size
We recommend to use as
maximum and click on
[Next].

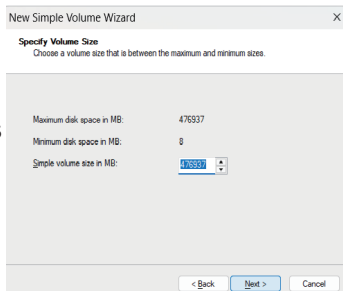

New Simple Volume Wizard

 
Specify Volume Size
Choose a volume size that is between the maximum and minimum sizes.

Maximum disk space in MB: 476937

Minimum disk space in MB: 8

Simple volume size in MB: 476937

< Back Next > Cancel

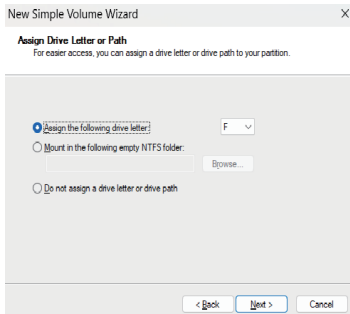

New Simple Volume Wizard

Assign Drive Letter or Path
For easier access, you can assign a drive letter or drive path to your partition.

☒ Assign the following drive letter: F

 
 
☐ Mount in the following empty NTFS folder:
Browse...

☐ Do not assign a drive letter or drive path

< Back Next > Cancel

Select the drive letter to
a sign the hard drive
and click on [Next].

Select the format settings:
NTFS or "FAT 32", "DEFAULT"
and Volume Label (Select the
features that you need to
format: "FAT32",
"Predetermined" , the hard
drive label that you need
(example:"New Volume") and
"Perform a quick format".

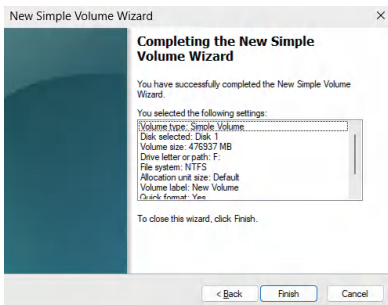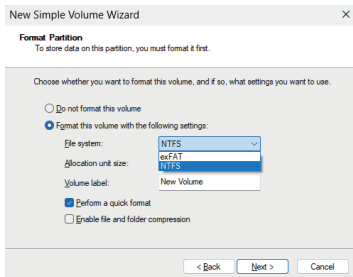

New partition is
complete and your
hard drive is ready
to be used. Click on
[Finish].

Data Testing and Reading Speed



9 * M.2 read/write speed is between 100-200MB/s

1 * M.2 read/write speed is between 600-800MB/s

2 * M.2 read/write speed is between 400-500MB/s

3 * M.2 read/write speed is between 300-400MB/s

4 * M.2 read/write speed is between 200-300MB/s

5 * M.2 read/write speed is between 200-300MB/s

6 * M.2 read/write speed is between 100-200MB/s

7 * M.2 read/write speed is between 100-200MB/s

8 * M.2 read/write speed is between 100-200MB/s

Troubleshooting Self-checking Steps

1. Check if the device (hard drive) connected to the product is faulty.

Connect to the NVME/PCIE slot on the motherboard via a SATA hard drive to check the status.

Verify that the hard drive is partitioned and formatted properly.

2. If connected to a PC, check the status of the PC.

Check that the PC's USB port is working properly.

Connect to another PC and check if the same condition occurs. Make sure your PC is not infected with virus.

3. Check the USB cable or adapter of the product.

Use an extra USB cable (USB used for the printer) to check whether there is problem of product USB cable.

Check if the adapter is faulty (if the product has a power supply).

Caution

Do not connect the 803M09 and hard drive to a computer when they are not fully assembled. There is a risk of damage and electric shock to the hard drive.

We will not be liable for damages to the hard drive used in connection with this equipment. We will not be liable for loss of data recorded on the hard drive.